


SWORKz S14-4 Series Brake Steering System Slipper Clutch Set Assembly Note

1

Initial Brake Setup with Brake Screw 105009:

Step 1: Fully Tighten Brake Screw 105009 (clockwise)

Step 2: Open Brake Screw 105009 for 2 Turns (counterclockwise)

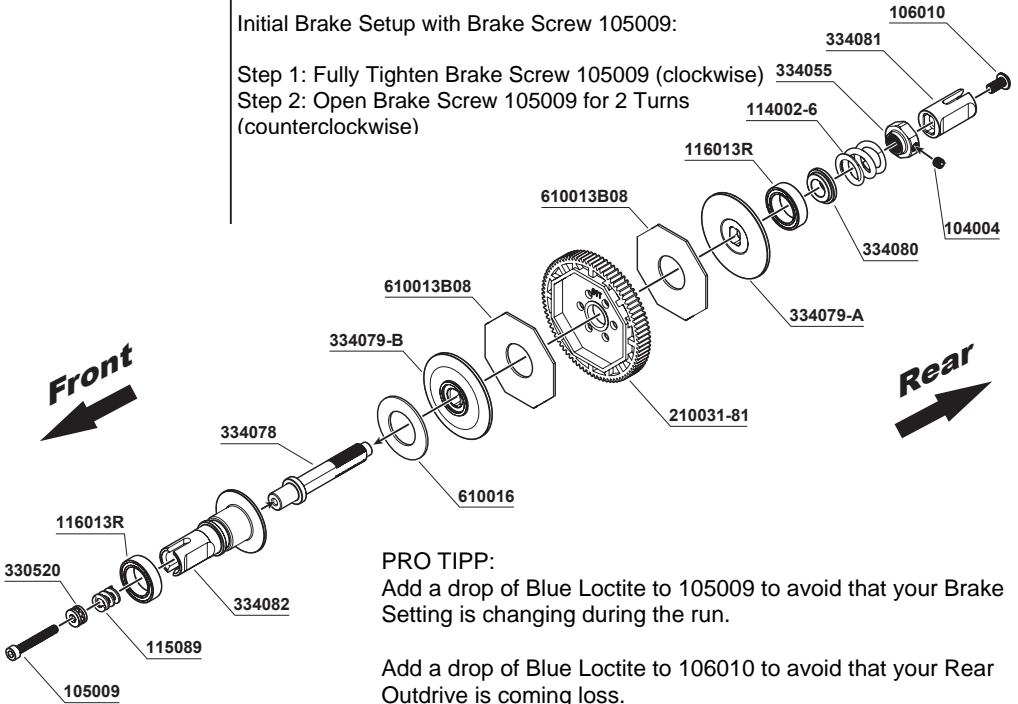

PRO TIPP:

Add a drop of Blue Loctite to 105009 to avoid that your Brake Setting is changing during the run.

Add a drop of Blue Loctite to 106010 to avoid that your Rear Outdrive is coming loss.

Use SWORKz Mr. Grease High Pressure Black Grease (SW600006) on 330520 to make sure your Thrust Bearing is running smooth and is more durable.

2

